

MAKE YOURSELF AT HOME


IN-ROOM INSTRUCTION MANUAL

TURN IT UP




MARSHALL ACTON II

- 01. Aux input for 3.5 mm jack
- 02. Source indicators
- 03. Source button
- 04. Volume knob
- 05. Bass knob
- 06. Treble knob
- 07. Play/pause button
- 08. Power lever

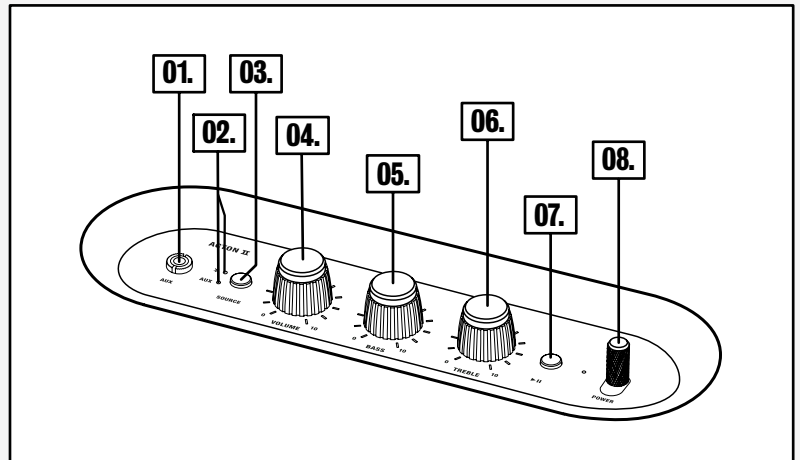

CONFIGURATION

Configure the speaker with the **Marshall Bluetooth®**. The app is available on the App Store and Google Play. Download the **Marshall Bluetooth®** app and follow the in-app instructions.

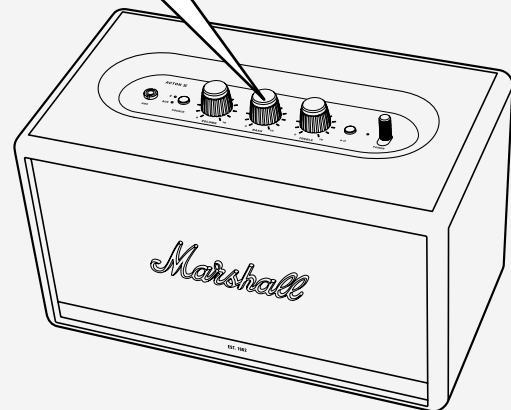

SELECT THE AUDIO SOURCE

Connect the Marshall Acton II via wireless bluetooth connection or via aux - 3.5 mm stereo jack:

1. Push the source button to toggle between bluetooth and aux audio source.
2. A lit indicator shows which source is selected.

The source can also be selected from the **Marshall Bluetooth®** app.

CONNECT VIA BLUETOOTH (PAIRING)

1. Select Bluetooth as the input. Pushing the **SOURCE** button toggles the input sources.
2. Push and hold the **SOURCE** button for 2 seconds.
3. Enable Bluetooth on your device (Smartphone, Tablet, Computer)
4. Select **ACTON II** from the Bluetooth list and accept pairing.

The bluetooth indicator light on the speaker stops flashing and remains on when the devices are connected.


CONNECTING VIA AUX INPUT

1. Connect a 3.5 mm stereo jack to the input labelled aux on the top of the speaker.
2. Connect the other end of the lead to the audio output on your audio source.
3. Select aux as the input. Pushing the source button toggles the input sources.

RISE & TOAST



SMEG TOASTER

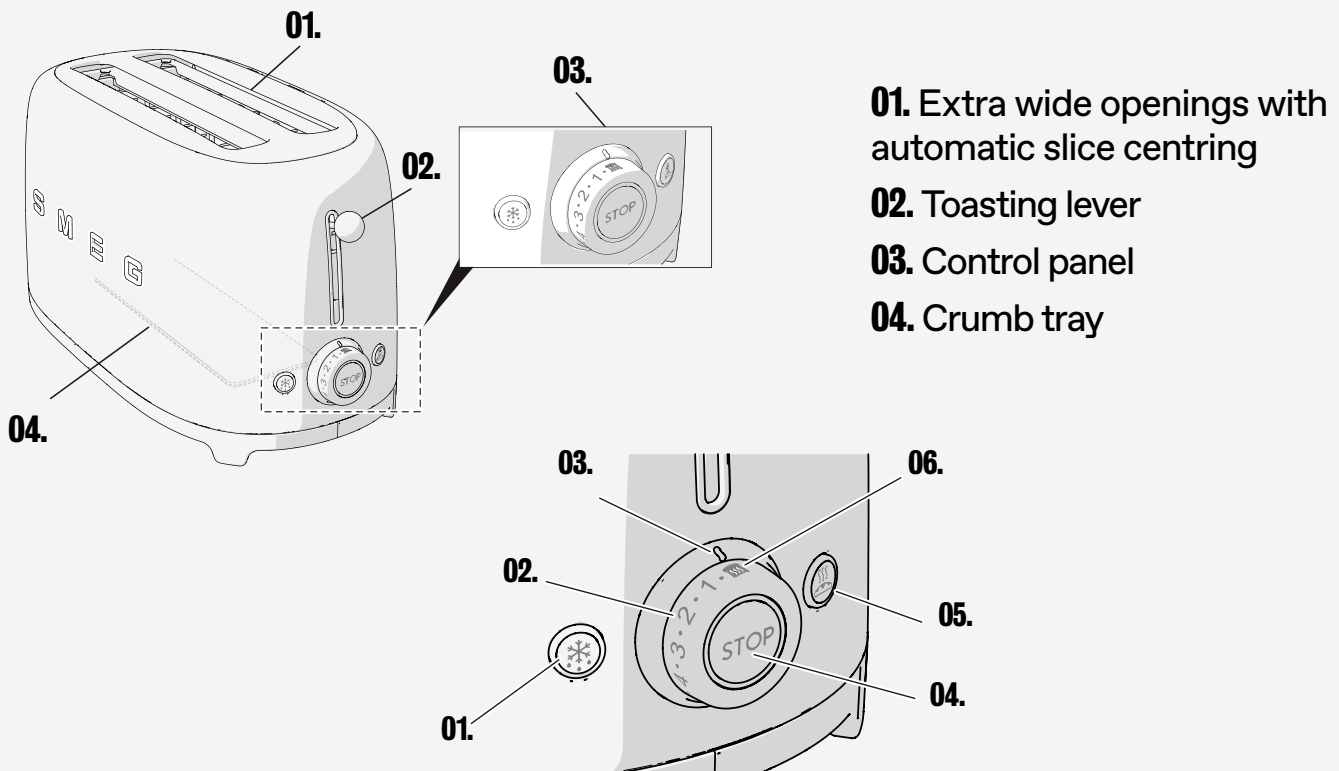

01. DEFROST FUNCTION BUTTON

Useful for toasting frozen bread. During toasting, the button lights up to indicate that the toasting cycle is active.

02. BROWNING CONTROL BUTTON

Useful for selecting one of the 6 browning levels or the Reheat function. During toasting, the centre LED lights up to indicate that the cycle is active.

03. BROWNING INDICATOR

Shows the selected browning level or the selected Reheat function.

04. STOP FUNCTION BUTTON

The stop button allows you to cancel or interrupt the toasting cycle at any time.

05. BAGEL FUNCTION BUTTON

Allows you to toast just one side of the bagel or any other type of bread, without toasting the other. During toasting, the Bagel button lights up to indicate that the function is active.

06. REHEAT FUNCTION

Allows you to reheat cold toast or continue the toasting cycle if the result is unsatisfactory. During toasting, the centre LED lights up to indicate that the toasting cycle is active.


HEAT IT UP

Sale



BOSCH MICROWAVE

- 01.** The display panel indicates the time or time duration.
- 02.** The rotary knob sets the time, time duration or automatic programmes.
- 03.** Sensors select the functions.
- 04.** Door release button to open it.

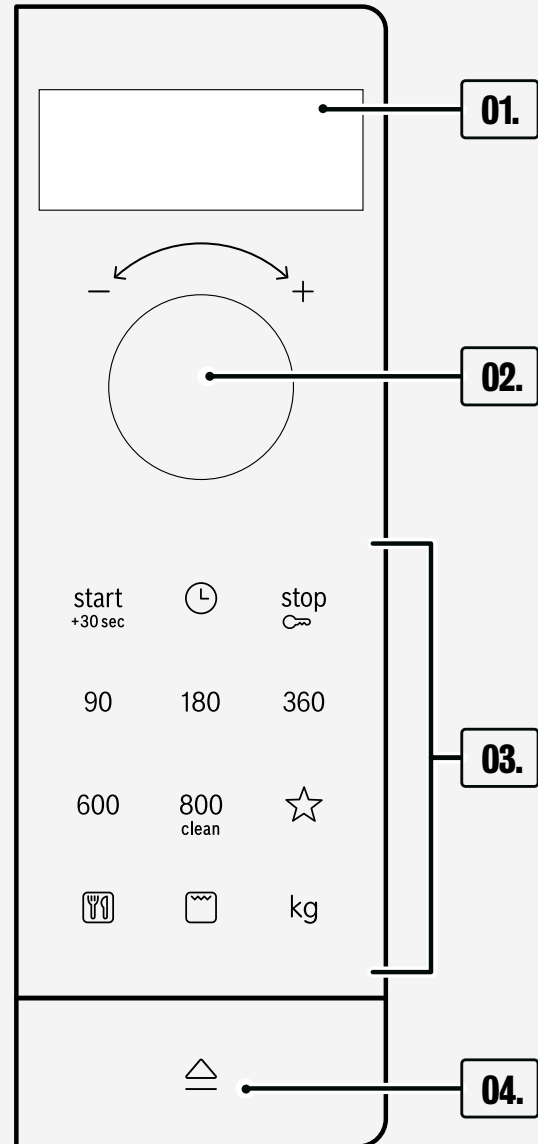

GRILL SAUSAGES OR TOASTS. GRILL FOOD

Combined microwave operation. Cook dishes au gratin.




GILDING

In this section, there are pre-programmed settings for various dishes. Press as many times as necessary until the display shows the desired programme number.

BOSCH OVEN

- 01.** Function selector: Allows you to set the type of operation or other functions.
- 02.** Touch fields: Touch the symbol to select the function.
- 03.** Display: Shows active function symbols and time-related functions.
- 04.** Rotary dial: Allows you to set the temperature of the heating type or select the setting for other functions.

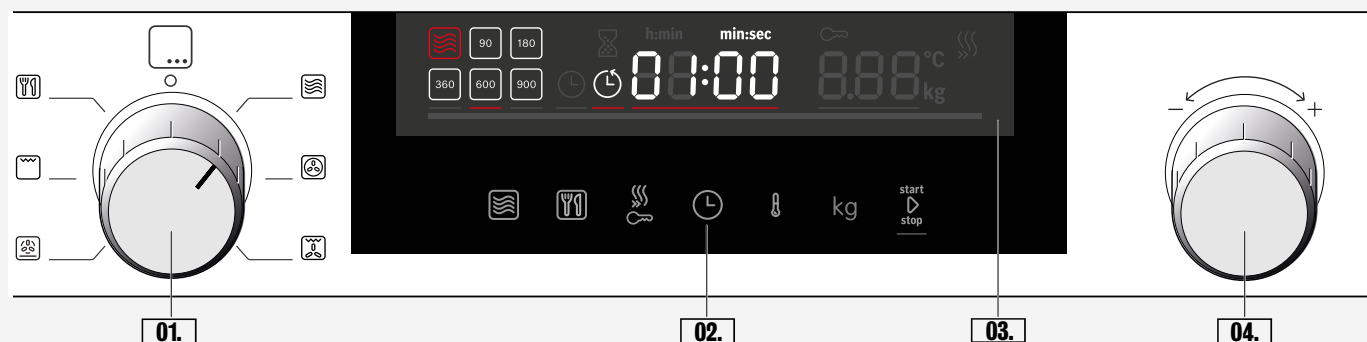

TOUCHSCREENS AND DISPLAY

 **MICROWAVE:** Select the microwave power levels, or activate a microwave function for a type of heating.

 **PROGRAMMES:** Access the programme selection, set the programme number with the rotary selector.

 **QUICK PREHEAT/CHILD SAFETY LOCK:** Short press - activate/deactivate quick preheat. Long press - activate/deactivate child safety lock.

 **TIME FUNCTIONS:** Select the time functions and set them with the rotary selector.

 **TEMPERATURE:** Select the temperature and set it with the rotary selector.

kg **WEIGHT:** Select the weight and adjust it with the rotary selector.

 **START/STOP:** Start or stop operation. Tip - Long press ends operation, and the settings of the selected operating type are reset to the default values.

FUNCTION SELECTOR

 **ZERO POSITION:** The oven is switched off.

 **MICROWAVE:** Select microwave mode.

 **CIRCULATING HOT AIR:** The fan distributes the heat from the circular heating element on the rear wall evenly throughout the oven's interior.

 **AIR-CIRCULATING GRILL:** The fan spreads hot air from the grill's heating element around the food.

 **PIZZA POWER:** The lower heating element and the circular heating element on the rear wall heat up.


 **GRILL:** The entire surface under the grill heating element gets hot.

 **PROGRAMMES:** Here you can find pre-programmed settings for many dishes.

GOODBYE DISHES



 DISHWASHER I

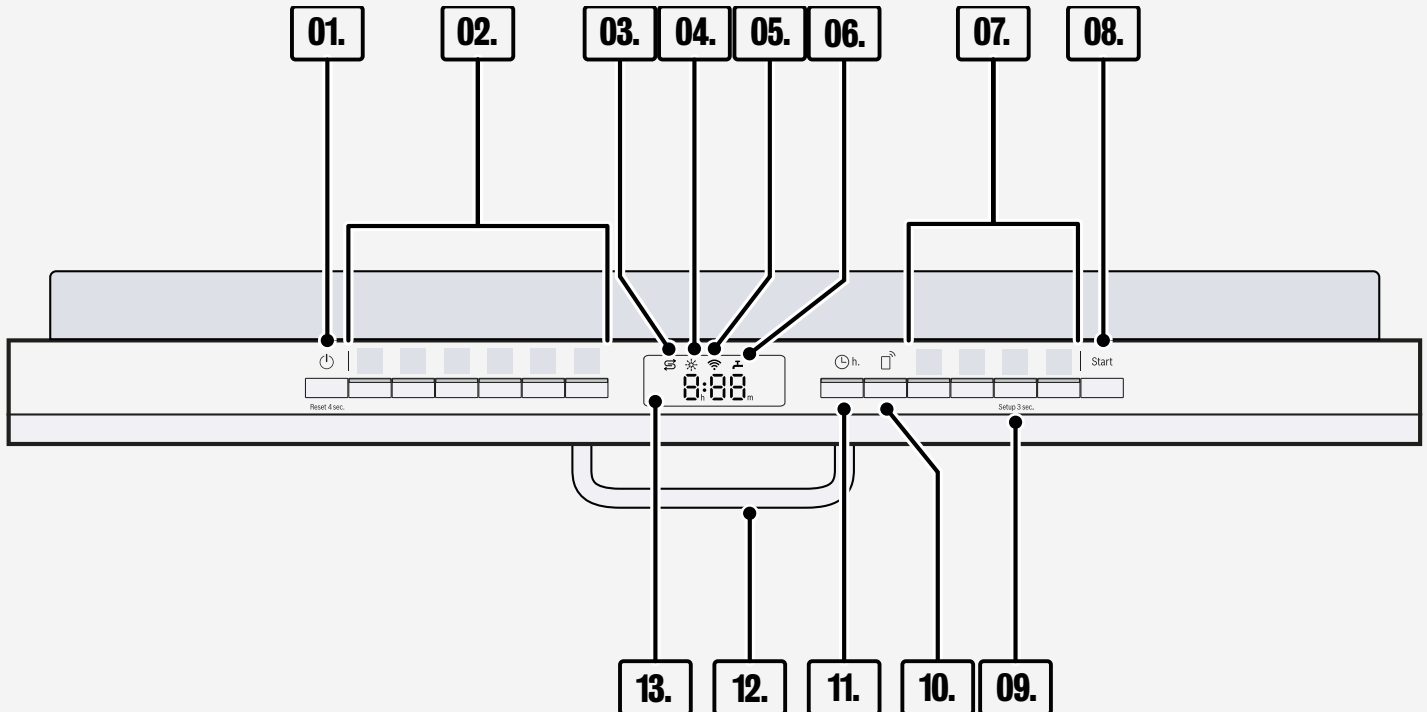

01. On/off button and reset button

02. Programme buttons

03. Lack of special salt indication : Water softening system

04. Lack of rinse aid indication

05. WLAN indication

06. Water inlet indication: Indication for water inlet

07. Programme buttons and additional functions

08. Programme start button

09. Setup 3 sec. button: Pressing for approximately 3 seconds opens the factory settings.

10. Remote start

11. Time preset

12. Handle: Opens the dishwasher door.

13. Display: Shows information about the remaining time or the factory settings. You can change the factory settings using the display and the adjustment buttons.

PROGRAMMES

UTILISATION

PROGRAMME CYCLE

INTENSIVE 70°



CONTAINER: Wash pots, pans, less delicate crockery and cutlery.

DEGREE OF GRIME: Remove food residues that are very sticky, burnt or dry and contain starch or egg white.

INTENSIVE:

- Pre-wash
- 70°C rinse
- Intermediate rinse
- 69°C rinse
- Drying

AUTO 45-65°

Auto

CROCKERY: Wash various types of crockery and cutlery.

DEGREE OF GRIM: Remove slightly dried household food residues

OPTIMISED WITH SENSORS:

- Optimised according to the dirtiness of the wash water using sensors.

ECO 50°

Eco

CROCKERY: Wash various types of crockery and cutlery.

DEGREE OF GRIM: Remove slightly dried household food residues

ECONOMICAL PROGRAMME:

- Pre-wash
- 50 °C rinse
- Intermediate rinse
- 60°C rinse
- Drying

SILENT 50°



CROCKERY: Wash various types of crockery and cutlery.

DEGREE OF GRIM: Remove slightly dried household food residues

OPTIMISED NOISE:

- Pre-wash
- 50°C rinse
- Intermediate rinse
- 65°C rinse
- Drying

EXPRESS 65° - 1H




CROCKERY: Wash various types of crockery and cutlery.

DEGREE OF GRIM: Remove slightly dried household food residues

WITH TIME OPTIMISATION:

- 65°C wash
- Intermediate rinse
- 69°C rinse
- Drying

DISHWASHER II

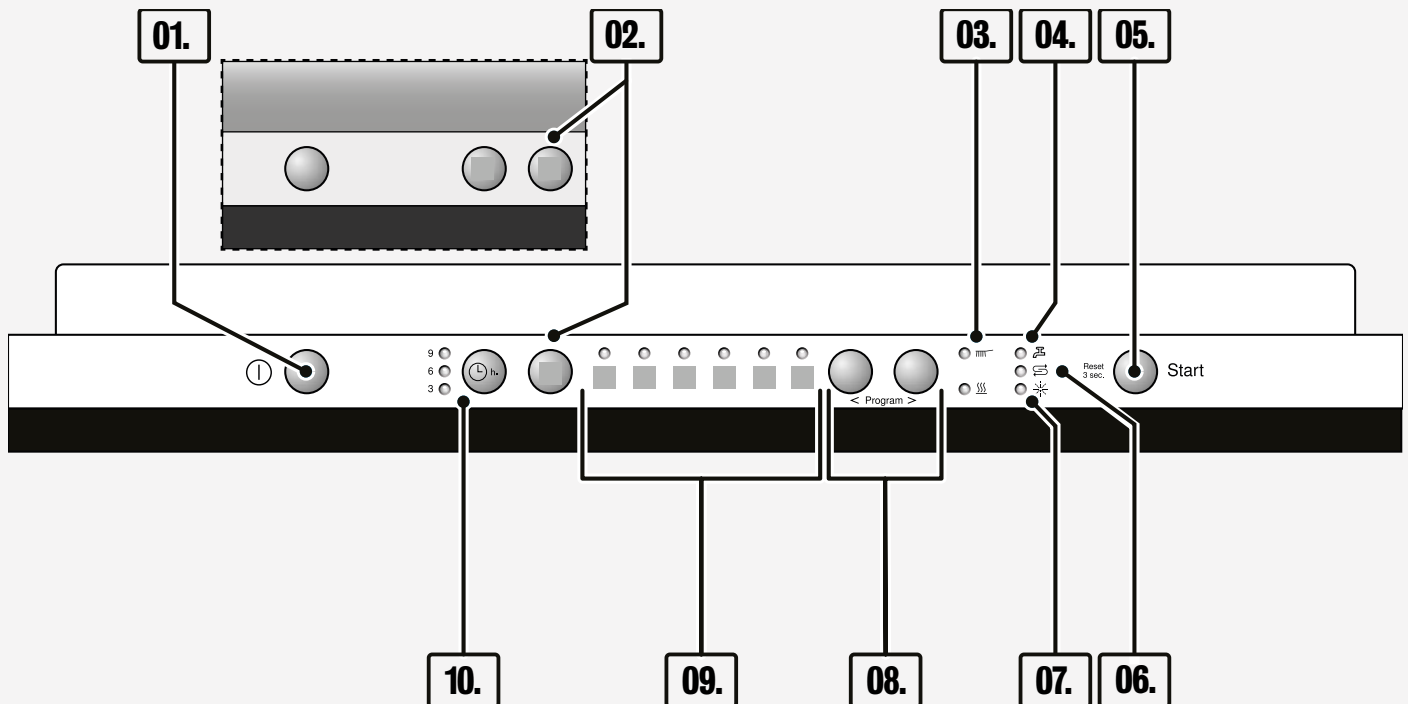

01. On/off button

02. Additional functions

03. Programme sequence display: Indicates which programme cycle the dishwasher is in, e.g. washing or drying

04. Water inlet indicator: Water inlet indicator lights up

05. Start button and reset button (press for 3 seconds)

06. Special salt shortage indicator

07. Rinse aid shortage indicator

08. Adjustment buttons

09. Programmes


10. Time pre-selection

PROGRAMMES

UTILISATION

PROGRAMME CYCLE

INTENSIVE 70°

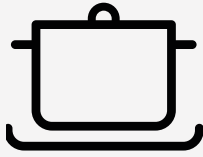

CROCKERY: Wash pots, pans, less delicate crockery and cutlery.

DEGREE OF GRIME: Remove food residues that are very sticky, burnt or dry and contain starch or egg white.

INTENSIVE:

- Pre-wash
- 70°C rinse
- Intermediate rinse
- 69°C rinse
- Drying

AUTO 45-65°



CROCKERY: Wash various types of crockery and cutlery.

DEGREE OF GRIM: Remove slightly dried household food residues

OPTIMISED WITH SENSORS:

- Optimised according to the dirtiness of the wash water using sensors.

ECO 50°



CROCKERY: Wash various types of crockery and cutlery.

DEGREE OF GRIM: Remove slightly dried household food residues

ECONOMICAL PROGRAMME:

- Pre-wash
- 50 °C rinse
- Intermediate rinse
- 60°C rinse
- Drying

GLASS 40°



CROCKERY: Wash delicate crockery, cutlery, temperature-sensitive plastics, glasses with and without feet in the basket for glasses with feet.

DEGREE OF GRIM: Remove lightly clinging, fresh food residues.

ESPECIALLY DELICATE:

- Pre-wash
- Wash 40 °C
- Intermediate rinse
- 60°C rinse
- Drying

PROGRAMME 1H



CROCKERY: Wash various types of crockery and cutlery.

DEGREE OF GRIM: Remove slightly dried household food residues

WITH TIME OPTIMISATION:

- 65°C wash
- Intermediate rinse
- 70°C rinse
- Drying

ESPRESSO YOURSELF



SJÖSTRAND COFFEE MACHINE

01. SWITCH ON THE MACHINE


Switch on the coffee machine and let it heat up for a few seconds

02. CAPSULE


Place the capsule in the capsule slot and pull the lever to remove the coffee

03. LONG OR SHORT COFFEE

Press the long or short coffee button on the right-hand side

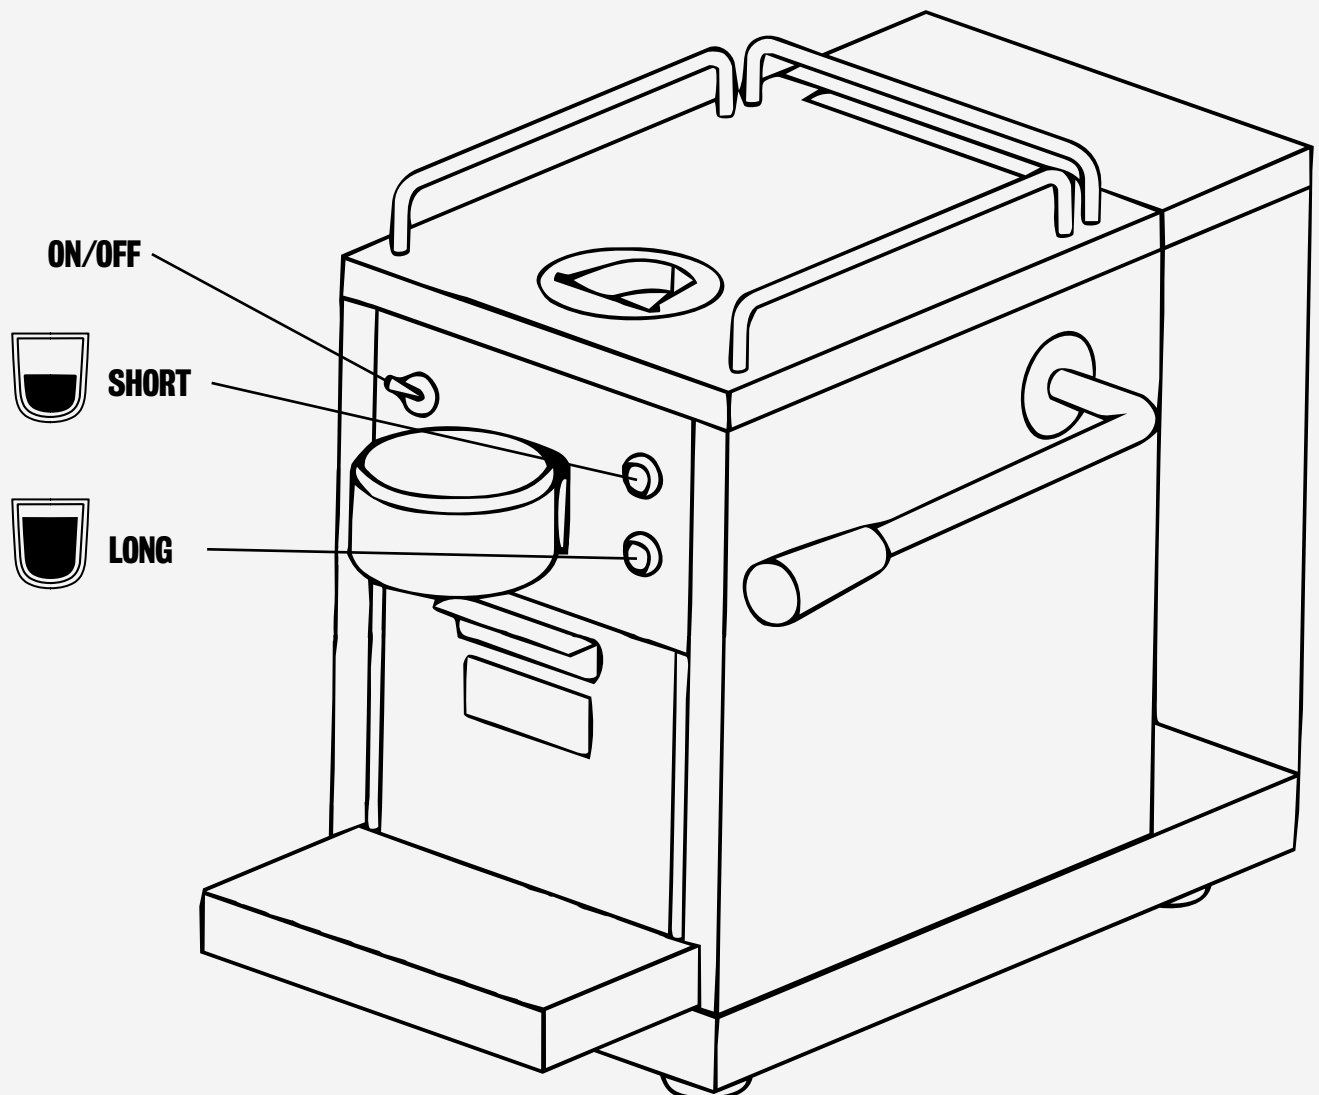


SET THE MOOD

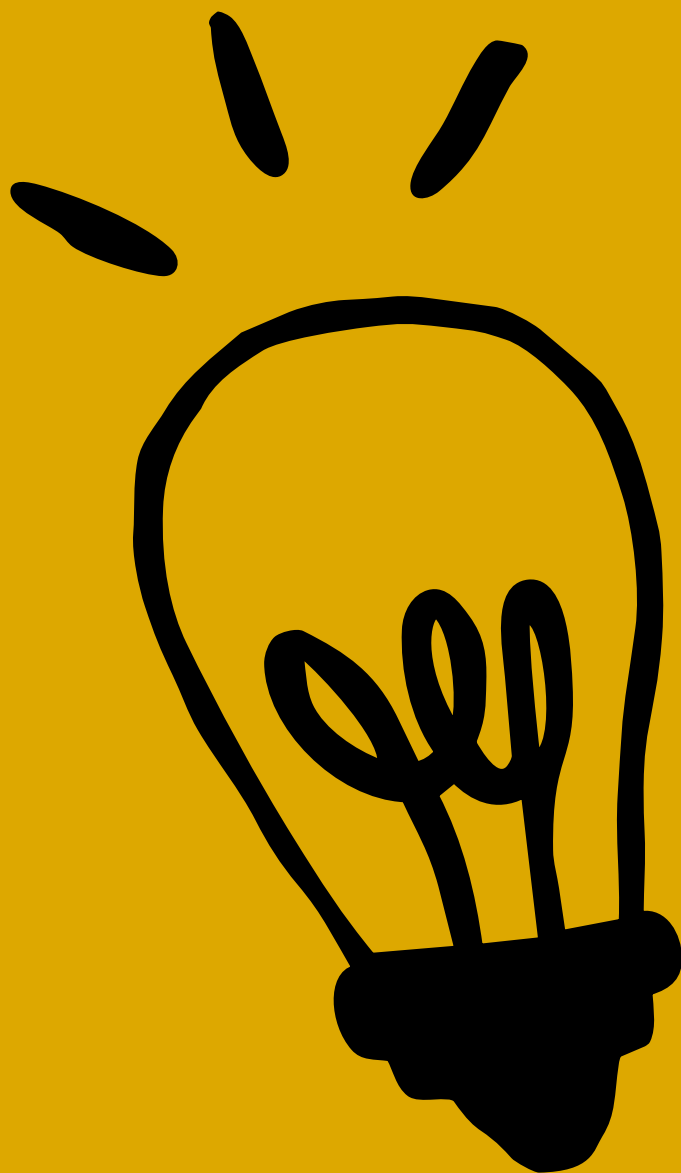

DIMMERS

CLICK/KEEP PRESSED

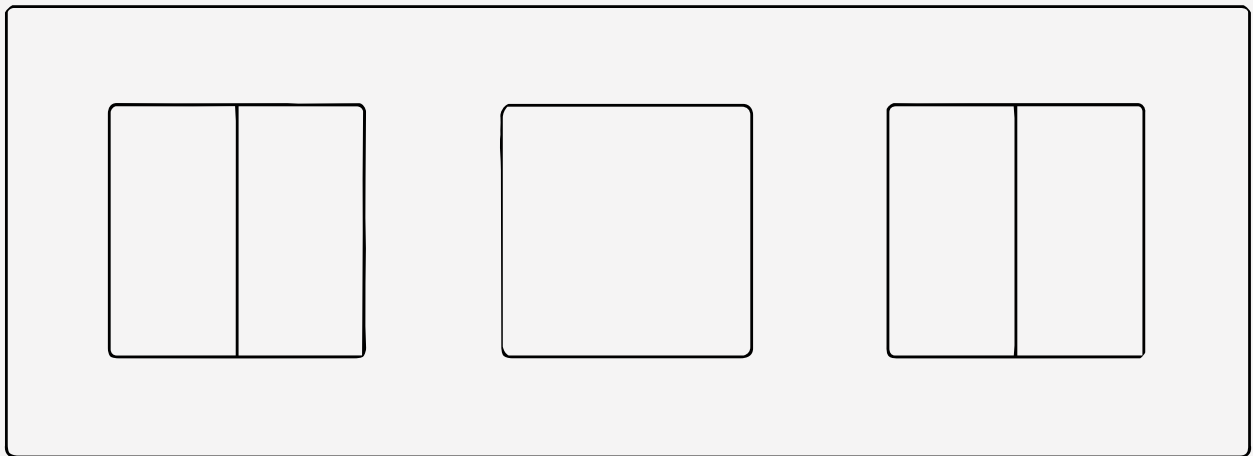

WITH THE LIGHT SWITCHED OFF

1. Press 1 time: lights up to a medium intensity
2. lights up to a maximum intensity or until you remove your finger

WITH THE LIGHT ON

1. Press 1 time: switches off completely
2. Long press: switches off at minimum intensity or until you remove your finger